

70mm

78mm

快速安装指南

WIFI 6 AX1800 USB 无线网卡

8832BU

一、扫描二维码下载驱动程序。

二、下载后的文件为压缩文件，需要将其解压。然后选择相应的系统驱动程序进行安装。如图所示：

→

setup

1

三、驱动程序安装进程中，请等待大约一分钟：

Realtek USB Wireless LAN Driver

安装状态

InstallShield Wizard 正在安装 Realtek USB Wireless LAN Driver

正在安装 Cisco EAP

取消

四、安装进程完成后，请选择“否，稍后再重新启动计算机”，然后点击“完成”。

Realtek USB Wireless LAN Driver

InstallShield Wizard 完成

InstallShield Wizard 已成功安装 Wireless LAN Driver。在使用该程序之前，必须重新启动计算机。

☐ 是，立即重新启动计算机。

☒ 否，稍后再重新启动计算机。


从驱动器中取出所有磁盘，然后单击“完成”以完成安装。

← 上一步(B)

完成

取消

五、在完成上面的四个步骤后，网卡就可以正常使用，请正确操作网卡去连接wifi上网：

01.点击电脑右下角此图标，打开去搜索WIFI信号，在列表中选择自己需要连接的WIFI 信号，图中以“CESHI-5G”信号为例：

CESHI 安全

EDUP-5G 安全

4G-WiFi-3DF8 安全

CESHI-5G 安全

02.输入“CESHI-5G”的密码：

CESHI-5G 安全

输入网络安全密钥

下一步 取消

03.当连接上WIFI成功的状态：

CESHI-5G 已连接，安全

属性 断开连接

4

5

Quick Installation Guide

WIFI 6 AX1800 USB Wireless Adapter

8832BU

1. Scan the QR code to download the driver program.

2. The downloaded file is a compressed file and needs to be decompressed. Select the corresponding system driver to install. as the picture shows:

→

setup

1

3. It may take about 1 minute to complete installation, wait for the driver to install.

Realtek USB Wireless LAN Driver

Setup Status

The InstallShield Wizard is installing Realtek USB Wireless LAN Driver

C:\Windows\SwUSB.exe Now installing Cisco EAP

Cancel

4. Choose “No, I will restart my computer later” to finish the process.

Realtek USB Wireless LAN Driver

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed Wireless LAN Driver. Before you can use the program, you must restart your computer.

☐ Yes, I want to restart my computer now.

☒ No, I will restart my computer later.


Remove any disks from their drives, and then click Finish to complete setup.

← Back

Finish

Cancel

5. Connect wifi correctly then you can access to the Internet.

01. Open the Internet icon at the lower right corner of the computer.

02. Searching and connecting the Wi-Fi you preferred on the detected Wi-Fi list.

03. Enter the Wi-Fi password to connect.

4399 Secured

4399-5g Secured

Connect automatically

Connect

04. Finally you are connected to the Wi-Fi.

4399-5g Connected, secured

Properties Disconnect

4

5